

**OGOR AND PASR EDITS
2004 ENHANCEMENTS
February 14, 2005**

NEW 2005 EDITS FOR OGOR

1. IF Part C Sales is greater than zero, and API Gravity is equal to zero, then execute edit.
EDIT – If Part C API Gravity is 0 then error.
ERROR MESSAGE: API Gravity is required for this Disposition Code.
2. IF Part A API Well Number is present, then execute edit.
EDIT – If API Well Number is not completely numeric, then error.
ERROR Message: API Well Number must contain 12 numeric digits.
3. IF Part B Disposition Code is 01, 02, 03, 04, 05, 06, 07, 09, 10, 11, 12, 13, 16, 20, 21, 22, 24, 28, 29, 32, 42, 44, 45, 46, 47, or 49, then execute edit.
EDIT – If Part B Water (BBL) is not 0 then error.
ERROR Message: Only Disposition Code 14, 17, 23, or 27, are valid for Water
4. IF Part C is present execute edit.
EDIT - Check calculations for OGOR-C (Beginning inventory + Produced Oil – Sales + Adjusted Volumes (can be either a negative or positive whole number) = Ending Inventory. If sum of calculation does not equal Ending Inventory then error.
ERROR MESSAGE: Beginning Inventory + Production – Sales Volume + or – Adjusted Volume must equal Ending Inventory.
5. IF Operator Number on header begins with “F, S, L, V, or W” and Well Status on Part A is equal to 01, 02, 14, 16, DRL, DRG, DSI, TA, ST, or PA execute edit.
EDIT – If Well Producing Interval is not equal to X01 then error.
ERROR MESSAGE: When well is offshore and well status is equal to 01, 02, 14, 16, DRL, DRG, DSI, TA, ST, or PA then the Well Producing Interval must be X01.
6. IF Water Production Volume is present on OGOR A execute edit.
EDIT – If the disposition code is equal to 14 on the OGOR-B and there is not at least one well status code on a OGOR-A of 04, WIW, 05, or WDW then error.
ERROR MESSAGE – If disposition code is 14 (Water Injected ON lease) then you must have a well on OGOR A with a well status code of 04, WIW, 05, or WDW and injection volumes. If you are not injecting on lease use Disposition Code 17 (Water Injected OFF lease).
7. IF operator number on header begins with F, S, L, V, or W and Well status on Part A is equal to 12, 13, OSI, or GSI execute edit.
EDIT: If Well Codes Action is blank then error
ERROR MESSAGE: When well is offshore and well status is 12, 13, OSI, or GSI then the Well Code Action must be code 1-6

4.6 NEW PASR EDITS

1. IF Sales/Transfers or Other Sources volume on any PASR Detail line is greater than 0 execute edit.(This excludes total Field)
EDIT – If BTU and API Gravity is equal to 0 then error.

ERROR MESSAGE: BTU or API Gravity must be greater than 0 when Sales/Transfers or Other Sources are reported.

2. IF BTU is populated execute edit.
EDIT – If BTU is less than 0 then execute error.
ERROR MESSAGE: BTU must be between 0 and 9999. Please enter a valid BTU Content..
3. IF the Report Type is equal to Original and the Total Sales/Transfers is equal to 0 execute edit.
EDIT – If BTU or API Gravity is not blank then error.
ERROR MESSAGE: BTU or API Gravity must be 0 when Sales/Transfers are 0.
4. For all PASR documents execute edit.
EDIT – If Operator Number is Blank or does not begin with F, L, S, V, or W then error.
ERROR – Operator Number must be entered. For PASR forms the Operator Number must begin with F, L, S, V, or W. (PASR documents required for only Offshore reporting)
7. IF position 1 and 2 of the Metering Point is 22, 23, or 32 and Output Fac. Measurement Pt. is present then execute edit.
EDIT – Compare the reported Output Fac. Measurement Pt. to the Sales Fac./Measurement Pt. If the 8th, 9th, and 10th characters of the two fields are not the same then error.
ERROR MESSAGE: The 8th, 9th, and 10th characters of the Output Fac/Measurement Pt. must match the 8th, 9th, and 10th characters of the Sales Fac/Measurement Pt.
9. IF position 1 and 2 of the Metering Point is equal to 22, 23, or 32 execute edit.
EDIT – If Sales Fac. Measurement Pt. is blank then error.
ERROR MESSAGE: If Metering Point starts with 22, 23, or 32 then Sales Fac. Measurement Pt. must be present.
10. IF position 1 and 2 of the Metering Point is 22, 23, or 32 and Output Fac. Measurement Pt. is present then execute edit.
EDIT – Compare the reported Output Fac. Measurement Pt. to the Metering Pt. If the 8th, 9th, and 10th characters of the two fields are not the same then error
ERROR MESSAGE: The 8th, 9th, and 10th characters of the Output Fac/Measurement Pt. must match the 8th, 9th, and 10th characters of the Metering Pt.
11. For all PASR detail lines execute edit.
EDIT - If Action Code, Metering Point, MMS Lease Agreement Number and other Sources Volumes already exists execute error:
ERROR MESSAGE: Duplicate lines for the same Action Code, Metering Point, MMS Lease/Agreement Number, and/or Other Sources exist Are not allowed on the PASR Detail.
12. If the Metering Point on the PASR Header is less than 11 digits execute edit.
EDIT - If the Metering Point is less than 11 characters or the first 7 are not numeric and/or the last 4 are not alpha/numeric then error
ERROR MESSAGE: Metering Point Number on the PASR Header must consist of 11 digits, the first 7 are numbers and the last 4 are alpha/numeric.
13. If the Output Facility Measurement Pt. is present execute edit.
EDIT: If the Output Facility Measurement Pt. is less than 11 characters or the first 7 are not numeric and/or the last 4 are not alpha/numeric then error:
ERROR MESSAGE: Output Facility Measurement Point number must consist of 11 digits, the first 7 are numbers and the last 4 are alpha/numeric.

14. If the Sales Facility Measurement Pt. is present execute edit.
EDIT: If the Sales Facility Measurement Pt. is less than 11 characters or the first 7 are not numeric and/or the last 4 are not alpha/numeric then error:
ERROR MESSAGE: Sales Facility Measurement Point must consist of 11 digits, the first 7 are numbers and the last 4 are alpha/numeric.
15. If the Metering Point on the PASR Detail is present execute edit.
EDIT: If the Metering Point is less than 11 characters or the first 7 are not numeric and/or the last 4 are not alpha/numeric then error:
ERROR MESSAGE: Metering Point Number in PASR Detail must consist of 11 digits, the first 7 are numbers and the last 4 are alpha/numeric.

NEW EDITS TO BE APPLIED TO ALL FORMS

Edit - Warnings

MRM receives numerous errors on the MMS Lease Number, MMS Agreement Number, and Agency Lease/Agreement Number fields. To decrease these errors in an upfront (reporter) edit these fields must be compared to an actual MRM file of valid Leases and Agreement and Agency Assigned Numbers. MRM Reporting Services indicates it is possible to provide these 3 files to use for editing these fields. It's recommended by MMS that these files are posted to a Website for subsequent downloading. Reporters could then access the same information (for example when there is a question if spacing is correct). Perhaps a search command could also be used. MRM Reporting Services indicated that the files will be updated on a monthly basis.

These Lease or Agreement Number and Agency Lease/Agreement Number edits cannot stop the document from being sent. Often the reporter may enter a valid Lease/Agreement number but it may not exist in the MRM reference data. Therefore these edits must be created as WARNINGS. For example if an error is identified the field will be highlighted (in color) so reporters will be more likely to notice the warnings.

Form 4054 (OGOR) Lease/Agreement Number Edit

1. IF Lease No./Agreement No. field is present then execute edit.
EDIT – Compare Lease/Agreement Number with the contents of the valid lease number file.
IF Lease Number is found
THEN is MMS or Agency Lease/Agreement Number Indicator equal to 'MMS'
IF Indicator is not 'MMS' then display error message.
ERROR MESSAGE: Lease type should be MMS. Please correct Lease Type.

ELSE
IF Lease/Agreement Number is not found
THEN compare Lease/Agreement Number with contents of the valid agreement number file.
IF Lease/Agreement Number is found
THEN is MMS or Agency Lease/Agreement Number Indicator equal to 'MMS'
IF Indicator is not 'MMS' then display error message.
ERROR MESSAGE: Lease type should be MMS. Please correct Lease Type.

ELSE
IF Lease/Agreement Number is not found

THEN compare Lease/Agreement Number with contents of the MRM valid agency number file.
IF Lease/Agreement Number is found
THEN is MMS or Agency Lease/Agreement Number Indicator equal to 'AGENCY'
IF Indicator is not AGENCY then display error message.
ERROR MESSAGE: Lease type should be AGENCY. Please correct Lease Type.

ELSE

IF Lease/Agreement Number is not found
THEN display Error Message.
ERROR MESSAGE – Lease/Agreement Number does not exist in the MRM valid lease, agreement, or agency number file. If Lease/Agreement Number or its' formatting is not corrected an error will occur when processed by MRM. This warning will not stop you from sending.

(Field will remain highlighted unless condition is corrected).

Form 4058 (PASR) Lease/Agreement Number Edit

1. IF Lease/Agreement No. field is present on the PASR detail then execute edit.
EDIT – Compare Lease/Agreement Number with contents of the MRM valid lease file.
IF Lease Number is not found
THEN compare Lease/Agreement Number with contents of the MRM valid agreement number file.
IF Lease/Agreement Number does not match any number in the file then error.
ERROR MESSAGE – Lease/Agreement Number does not exist in the MRM valid lease or agreement files. If Lease/Agreement Number or its' formatting is not corrected an error will occur when processed by MRM. This warning will not stop you from sending.

(Field will remain highlighted unless condition is corrected)